


Master the Drive Block Replacement on Your Kenmore Washer: A Step-by-Step Illustrated Guide

Replacing a drive block on a Kenmore washer may seem daunting, but with the right instructions and illustrations, it becomes an achievable task. This comprehensive guide will provide you with clear step-by-step directions, accompanied by detailed images, to empower you to execute the repair successfully. By following these instructions, you can save time, money, and restore your washer to its optimal performance.

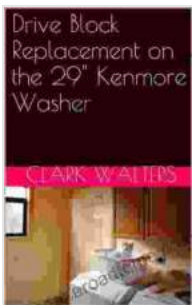

Drive Block Replacement on the 29" Kenmore Washer

★★★★★ 5 out of 5

Language : English
File size : 1446 KB
Text-to-Speech : Enabled
Screen Reader : Supported
Enhanced typesetting : Enabled
Lending : Enabled



Tools and Materials Required

Before embarking on the replacement process, ensure you have the necessary tools and materials:

- **Socket wrench set**
- **Adjustable wrench**

- **Allen wrench set**
- **Phillips head screwdriver**
- **Flathead screwdriver**
- **Hammer**
- **Replacement drive block**

Safety Precautions

Safety should always be your top priority when performing any repairs:

- Unplug the washer and turn off the water supply.
- Wear work gloves to protect your hands.
- If you are unfamiliar with electrical components, consult a qualified electrician.

Step-by-Step Replacement Instructions

1. Remove the Top Panel

1. Locate the two screws on the back of the washer securing the top panel.
2. Use a Phillips head screwdriver to remove these screws.
3. Slide the top panel back and lift it off.

2. Disconnect the Agitator

1. Using a socket wrench, remove the center bolt holding the agitator in place.

2. Gently lift and remove the agitator.

3. Remove the Stabilizer Bar

1. Locate the stabilizer bar beneath the agitator.
2. Use a socket wrench to remove the bolts securing the bar.
3. Remove the stabilizer bar.

4. Remove the Drive Motor

1. Disconnect the electrical wires connected to the drive motor.
2. Use a socket wrench to remove the bolts holding the drive motor.
3. Lift and remove the drive motor.

5. Remove the Drive Coupler

1. Locate the drive coupler connecting the drive motor to the drive block.
2. Use a socket wrench to loosen the bolt securing the drive coupler to the drive block.
3. Remove the drive coupler.

6. Remove the Drive Block

1. Locate the four bolts securing the drive block to the tub.
2. Use a socket wrench to remove these bolts.
3. Carefully lift and remove the drive block.

7. Install the New Drive Block

1. Place the new drive block onto the tub.

2. Insert the four bolts into the holes and tighten them securely using a socket wrench.

8. Install the Drive Coupler

1. Install the drive coupler onto the drive block.
2. Tighten the bolt securing the drive coupler to the drive block using a socket wrench.

9. Install the Drive Motor

1. Place the drive motor in its original position.
2. Tighten the bolts holding the drive motor in place using a socket wrench.
3. Connect the electrical wires to the drive motor.

10. Install the Stabilizer Bar

1. Place the stabilizer bar beneath the agitator.
2. Tighten the bolts securing the stabilizer bar using a socket wrench.

11. Install the Agitator


1. Place the agitator onto the drive block.
2. Insert the center bolt and tighten it securely using a socket wrench.

12. Install the Top Panel

1. Place the top panel onto the washer.
2. Slide the panel forward and insert the two screws on the back of the washer.

3. Tighten the screws using a Phillips head screwdriver.


Congratulations! You have successfully replaced the drive block on your Kenmore washer. By following these step-by-step instructions and using the provided illustrations, you have saved time, money, and ensured the smooth operation of your appliance. Washing clothes has never been easier! Remember, for future reference or sharing with others, you can access this article anytime online.

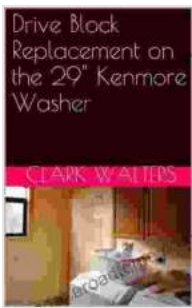

Drive Block Replacement on the 29" Kenmore Washer

★★★★★ 5 out of 5

Language : English
File size : 1446 KB
Text-to-Speech : Enabled
Screen Reader : Supported
Enhanced typesetting : Enabled
Lending : Enabled

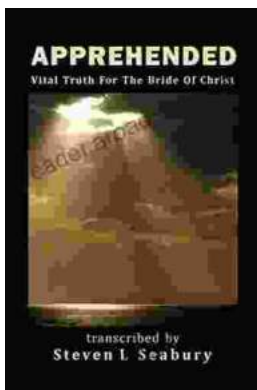

Unveiling the Apprehended Vital Truth for the Bride of Christ

In the tapestry of life, where trials and tribulations intertwine, there exists a profound truth that guides the Bride of Christ towards a transformative journey....



Ways To Master The French Cuisine: A Comprehensive Guide to Culinary Excellence

Prepare to embark on an extraordinary culinary adventure as we delve into the exquisite world of French cuisine. This comprehensive guide will...